

BACK COVER- BLANK

TIPPMANN

INDUSTRIAL PRODUCTS, INC.

CLICKER OPERATOR'S MANUAL



**7 TON
CLICKER**

AIR OPERATED DIE CUTTING MACHINES

15 TON CLICKER



Rev: 05-17-07

TIPPMANN

INDUSTRIAL PRODUCTS, INC.

3518 ADAMS CENTER ROAD, FORT WAYNE, IN 46806
260/441-9603 • 866/286-8046 • FAX: 260/441-8264
INTERNET: www.tippmannclicker.com

CONGRATULATIONS on your purchase of a Tippmann Clicker air powered die cutting machine. Please take time to read through this Operator's Manual thoroughly and become familiar with the Tippmann Clicker parts, operation, and safety precautions before attempting to operate this machine.

CLICKER OPERATOR'S MANUAL

CONTENTS

Table of Contents	1
Warning/Liability Statement.....	2
Safety	2
General Description & Specifications: Clicker 700	3
General Description & Specifications: Clicker 1500	3
Setup Instructions	4
Operation and Maintenance	5
Adjusting The Cutting Depth	6
Trouble Shooting	7
Steel Rule Die Service	8
Warranty & Repair	9
Clicker 1500 Air Accumulator System Schematic	10-11
Clicker 1500 Schematic.....	12-13
Clicker 700 Schematic.....	14-15
Additional Clicker Accessories	16 -17

WARNING

PLEASE TAKE TIME TO READ THROUGH THIS MANUAL THOROUGHLY AND BECOME FAMILIAR WITH THE TIPPMANN CLICKER PARTS, OPERATION, AND SAFETY PRECAUTIONS BEFORE YOU ATTEMPT TO OPERATE THIS MACHINE.

WARNING / LIABILITY STATEMENT

This Tippmann CLICKER die cutting machine is surrendered by Tippmann Industrial Products, Inc., with the understanding that the purchaser assumes all liability resulting from unsafe operation. Tippmann Industrial Products, Inc., shall not be liable for personal injury resulting from the use of this machine under any circumstances.

All information in this manual is subject to change without notice and in no way represents a commitment on the part of Tippmann Industrial Products, Inc. We reserve the right to make changes and improvements to products without incurring any obligation to incorporate such improvements in products previously sold.

WARNING

PLEASE TAKE TIME TO READ THROUGH THIS MANUAL THOROUGHLY AND BECOME FAMILIAR WITH THE TIPPMMANN CLICKER PARTS, OPERATION, AND SAFETY PRECAUTIONS BEFORE YOU ATTEMPT TO OPERATE THIS MACHINE.

SAFETY IS YOUR RESPONSIBILITY!

The ownership of this machine places upon you the total responsibility of its safe operation. You must observe the same safety precautions as you would any piece of equipment to assure the safety of not only yourself but everyone around you.

Outlined here are some general precautions to be aware of; ***the operator should at all times use common sense when using this machine and be sure others who may operate are also familiarized, responsible and safety conscious.*** Do not attempt to operate this machine until you have read and are familiar with this manual.

- Shut off air supply and cycle the machine to remove pressurized air:
 - Before moving machine.
 - Before disassembly of machine.
 - Before changing cutting bed.
 - Before adjusting die cutting bed.
- Do not attempt to operate this machine until it is securely positioned on a sturdy work surface.
- Do not operate this machine in any position except positioned securely on a sturdy work surface.
- Do not operate this machine when parts have been removed as damage to the machine and/or injury to operator may result.
- Keep hands clear of die mold blades and cutting board area at all times.
- Never attempt to override the Dual Palm Buttons.

GENERAL DESCRIPTION

The Tippmann Clicker is an air operated die cutting machine. The Tippmann Clicker is designed and built to achieve precision quality die cutting of leather, fabric, gasket material, plastic, etc.

"CLICKER" 7 TON



"CLICKER" 15 TON



CLICKER 7 TON - SPECIFICATIONS:

Make Tippmann
Model CLICKER 7 TON
Cutting Pressure 7 Ton
Cutting Beam 12" x 12"
Cutting Area 12" x 12"
Recommended Die Height 1.25"
Approximate Shipping Weight 260 lbs.
Operating Pressure 80-110 PSI
Overall Dimensions 12"W, 19"D, 13"H
Cutting capacity 12" x 12"
Power Requirements 80-120 lb. psi Air Pressure (Standard
1 HP Air Compressor)
Air Supply Industrial Quick Connect Coupler
Optional: OSHA Compliant: Two Hand no tie down controls - see accessories pages).

CLICKER 15 TON - SPECIFICATIONS:

Make TIPPMMANN
Model CLICKER 15 TON
Cutting Pressure 15 Ton
Cutting Beam 12" x 24"
Recommended Die Height 1.25"
Approximate Shipping Weight 560 lbs.
Operating Pressure 80-110 PSI
Overall Dimensions 25"W, 20"D, 14"H
Cutting capacity 12" x 24"
Power Requirements 80-120 lb. psi Air Pressure (Standard
1 HP Air Compressor)
Air Supply Industrial Quick Connect Coupler
Optional: OSHA Compliant: Two Hand no tie down controls - see accessories pages).

SETUP INSTRUCTIONS

⚠ WARNING: EQUIPMENT EXTREMELY HEAVY

CAREFULLY REMOVE THE TIPPMANN CLICKER FROM THE SHIPPING CONTAINER. THE "CLICKER 700" WEIGHS APPROXIMATELY 260 POUNDS AND THE "CLICKER 1500" WEIGHS APPROXIMATELY 560 POUNDS AND CARE SHOULD BE TAKEN TO HAVE SUFFICIENT HELP AVAILABLE WHEN MOVING EITHER TO PREVENT PERSONAL INJURY OR DAMAGE TO THE EQUIPMENT. THE CLICKER SHOULD BE PLACED ON A STURDY WORKBENCH CAPABLE OF SUPPORTING ITS WEIGHT AND THE ACTIVITIES ASSOCIATED WITH ITS OPERATION.

CONNECT THE AIR SUPPLY

Connect the air supply to the Clicker air supply hookup point and the Clicker is operational.

Be sure to read this Operations Manual before attempting to operate the Clicker so you can be sure to insure your safety and achieve maximum performance from your new Tippmann Clicker.

PERFORMANCE TIP

While the Tippmann Clicker will provide excellent performance on a typical workbench, we have found that a table built up to the same height of the cutting surface allows you to slide material in and out of the Clicker with ease. The following Tippmann Products are specifically designed to do this.

HEAVY DUTY TABLE

Provides a raised work surface which enhances your productivity by enabling you to slide material in and out of the Clicker with ease.

For 7 TON CLICKER



4

For 15 TON CLICKER



For more information on these and other accessories see accessory pages.

OPERATION AND MAINTENANCE

⚠ SAFETY IS YOUR RESPONSIBILITY!

THE OPERATOR SHOULD AT ALL TIMES USE COMMON SENSE WHEN USING THIS MACHINE AND BE SURE OTHERS WHO MAY OPERATE IT ARE ALSO FAMILIARIZED, RESPONSIBLE AND SAFETY CONSCIOUS. ALWAYS DOUBLE CHECK TO BE SURE THERE IS NOTHING IN THE CUTTING BED THAT SHOULD NOT BE, E.G. HANDS, TOOLS. DO NOT ATTEMPT TO OPERATE THIS MACHINE UNTIL YOU HAVE READ AND ARE FAMILIAR WITH THIS MANUAL.


TO OPERATE

Place the die on the material, where it is to be cut. Slide material and die into the center of the cutting area. Press and hold buttons until material is cut.


MAINTENANCE

Keep the Tippmann Clicker clean. Monthly place a couple drops of air tool oil into the hose connection at the air supply hookup point.

TOP FRONT VIEW

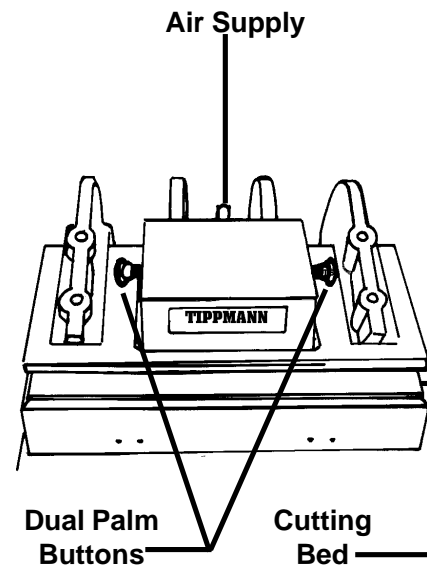

BOTTOM VIEW

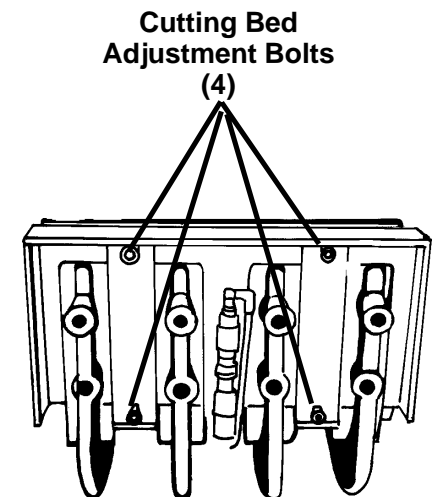

5

ADJUSTING THE CUTTING DEPTH

⚠ WARNING: IMPORTANT SAFETY PRECAUTIONS

DISCONNECT THE MACHINE FROM AIR SUPPLY AND CYCLE THE CLICKER TO EXHAUST ANY REMAINING PRESSURIZED AIR FROM THE MACHINE. BE SURE TO HAVE SUFFICIENT HELP WHEN MOVING THE MACHINE AS THE "CLICKER 700" WEIGHS 260 POUNDS AND THE "CLICKER 1500" WEIGHS 560 POUNDS AND IF EITHER WERE ALLOWED TO SHIFT UNEXPECTEDLY IT COULD CAUSE PERSONAL INJURY OR EQUIPMENT DAMAGE. READ THIS MANUAL AND AT ALL TIMES USE COMMON SENSE WHEN USING THIS MACHINE. BE SURE OTHERS WHO MAY OPERATE OR PERFORM MAINTENANCE HAVE ALSO READ THIS MANUAL, ARE RESPONSIBLE AND SAFETY CONSCIOUS.


The Cutting Bed is adjusted at the factory to allow the use of either 1 1/4" die mold blades or .937" die mold blades.

- If the blade does not penetrate through all material an adjustment may be necessary.

To adjust the die mold blade do the following:

1. Disconnect the air supply to the Clicker.
2. Cycle the Clicker to exhaust any remaining pressurized air.
3. Read and adhere to the above Safety Precautions.
4. Locate the 4 Die Mold Blade adjustment nuts on the bottom of the Clicker. (a, b, c, d - above)
5. Loosen the locking nut on bolt "a".
-Turn out counterclockwise 1/4 turn. (This will move the deck approximately 1/64" deeper into the cutting bed.)
-Tighten the locking nut on "a".
6. Loosen the locking nut on bolt "b".
-Turn bolt "b" out counterclockwise 1/4 turn.
-Tighten the locking nut on "b".
7. Loosen the locking nut on bolt "c".
-Turn bolt "c" out counterclockwise 1/4 turn.
-Tighten the locking nut on "c".
8. Loosen the locking nut on bolt "d".
-Turn bolt "d" out counterclockwise 1/4 turn.
-Tighten the locking nut on "d".
9. Return Clicker to a secure position on a sturdy workbench.
10. Reconnect Clicker to air supply and run test cut to confirm that proper depth has been achieved. Repeat as necessary.

(Bottom View of model 1500 shown)
Cutting Bed Adjustment Bolts (4)

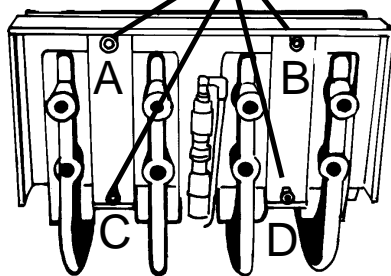

TROUBLE SHOOTING

- **Material is not completely cut.**
 - Make sure die's cutting edge has not become excessively dulled.
 - Adjust cutting depth* as outlined in adjusting the cutting bed on page 6.
- **Cutting bed cutting Surface has become severely worn after much use.**
 - It has developed uneven / severely worn spots causing some portions of die pattern to remain uncut.
 - Replace cutting bed.
- **Cutting bed does not raise when Dual Palm Buttons are pressed.**
 - Check to be sure air supply is hooked to Clicker and has adequate pressure.

* Cutting depth - When Dual Palm Buttons are simultaneously pushed, the clicker is designed so that the bottom bed raises approximately 1" pressing the die cutting blade through the material to be cut approximately 1/32"- 1/16" into the cutting surface to insure a fine cut.

- **The machine seems to have an air leak**

There are 2 places on your Clicker press to check for air leaks.

 - Make sure your air is turned on and press the dual palm buttons, and locate the leak by sound. If there is a leak, it will be coming from either the control box or the under side of the press.
 1. If the leak is coming from the control box you will want to follow these steps.
 - 1). Remove control box cover
 - 2). Check all fittings to make sure that they are airtight.
 - 3). If you are able to locate the leak, you will need to replace the faulty fittings. Ex. The hose to the barb (male fitting) is not properly seated. If this is the case, remove hose and cut 1/2" back. Re-connect hose and the clamp.
 2. If the leak appears to be coming from the underside of the press, it is either coming from the bladder or the quick exhaust. Please contact Tippmann Industrial Products for further instruction on how to fix the leak.
 - I have checked both the control box and the underside of the machine for leaks, but the leak appears to be coming from the compressor or the compressor hose. How should I proceed?
 - If you have determined that you have an air leak coming from your compressor hose, please refer to your compressor manual or contact your compressor manufacturer.

STEEL RULE DIE SERVICE

Tippmann Industrial offers a complete steel rule die service.

Tippmann Industrial will custom manufacture just about any die you can imagine. Quickly available and competitively priced, Tippmann is sure to satisfy, we guarantee it.

We stand behind our product and our on time delivery, because we realize that your success is counting on it. Delivery time depends on die complexity. Please specify due date. RUSH DELIVERY is available. In order to serve you, we can accept die drawings directly through our web site, or we can also accept faxes. If sending us a file via internet, Preferred file type is PDF. Please visit: tippmannclicker.com

When ordering via internet:

- Please attach a line diagram or pattern to scale.
- It is very important that you send us the exact size and shape that you need.
- Please include dimensions on the drawing or diagram, so that we are sure the dimensions are identical to what you are looking for.
- After we receive your drawing, we will then email you a quote.

When ordering over fax:

If you are going to send us a drawing via fax, please call us first: TOLL FREE: 866-286-8046, to go over any questions you may have before faxing the drawing to us. After discussing the order with us, you will then want to fax it to: FAX: 260-441-8264

- Please include line diagram to scale
- It is very important that you send us the exact size and shape that you need.
- Please include dimensions on the drawing or diagram, so that we are sure the dimensions are identical to what you are looking for.
- After we receive the fax, we will then call with a quote.

Note: Holes and slots can be placed in the die when we produce it, thus eliminating some of the additional working of the material after die cutting.

Note: Dies larger than the Clicker's cutting bed can be used with the Tippmann Clicker. To do this, place the die and material over hanging either end of the Clicker and make a single cut...slide the overhanging* die and material into the Clicker bed and cut again.

Die Specs:

- 1 ¼" side face double bevel
- We also have 6 and 8 point dies available

Guidelines for price quoting:

- \$2.00 per linear inch
- \$7.00 per punch
- \$30.00 per slot punch (in most cases)
- Slit pricing is also available, price varies.

Prices subject to change. 8

TIPPMANN

INDUSTRIAL PRODUCTS, INC.

WARRANTY AND REPAIR POLICY

Tippmann Industrial Products, Inc., is dedicated to providing you with the precision manufactured Tippmann Clicker die cutting machine and the quality support necessary for the utmost satisfaction in its use. In the event warranty or other non-warranty related repairs are required, we are here for you. For assistance with warranty and repair call 1 (260) 441-9603.

WARRANTY STATEMENT

Tippmann Industrial Products, Inc. warrants that this product is found free from defects in materials and workmanship for a period of 1 year from the original date of purchase by the initial owner/purchaser. On claims submitted as outlined in "WARRANTY OR REPAIR PROCEDURE" Tippmann Industrial Products, Inc. will repair or replace, without charge, any parts that have failed through defect in material or workmanship.


WARRANTY OR REPAIR PROCEDURE

For warranty and non-warranty repair, after calling the above warranty and repair, ship or deliver your Tippmann Clicker or specific parts to Tippmann Industrial Products, Inc. postage or delivery charges prepaid, a brief statement regarding the requested repair, your name, address and telephone number where you can be reached during normal business hours, if possible.

SHIP TO:



TIPPMANN INDUSTRIAL PRODUCTS, INC.

3518 Adams Center Road
Fort Wayne, IN 46806

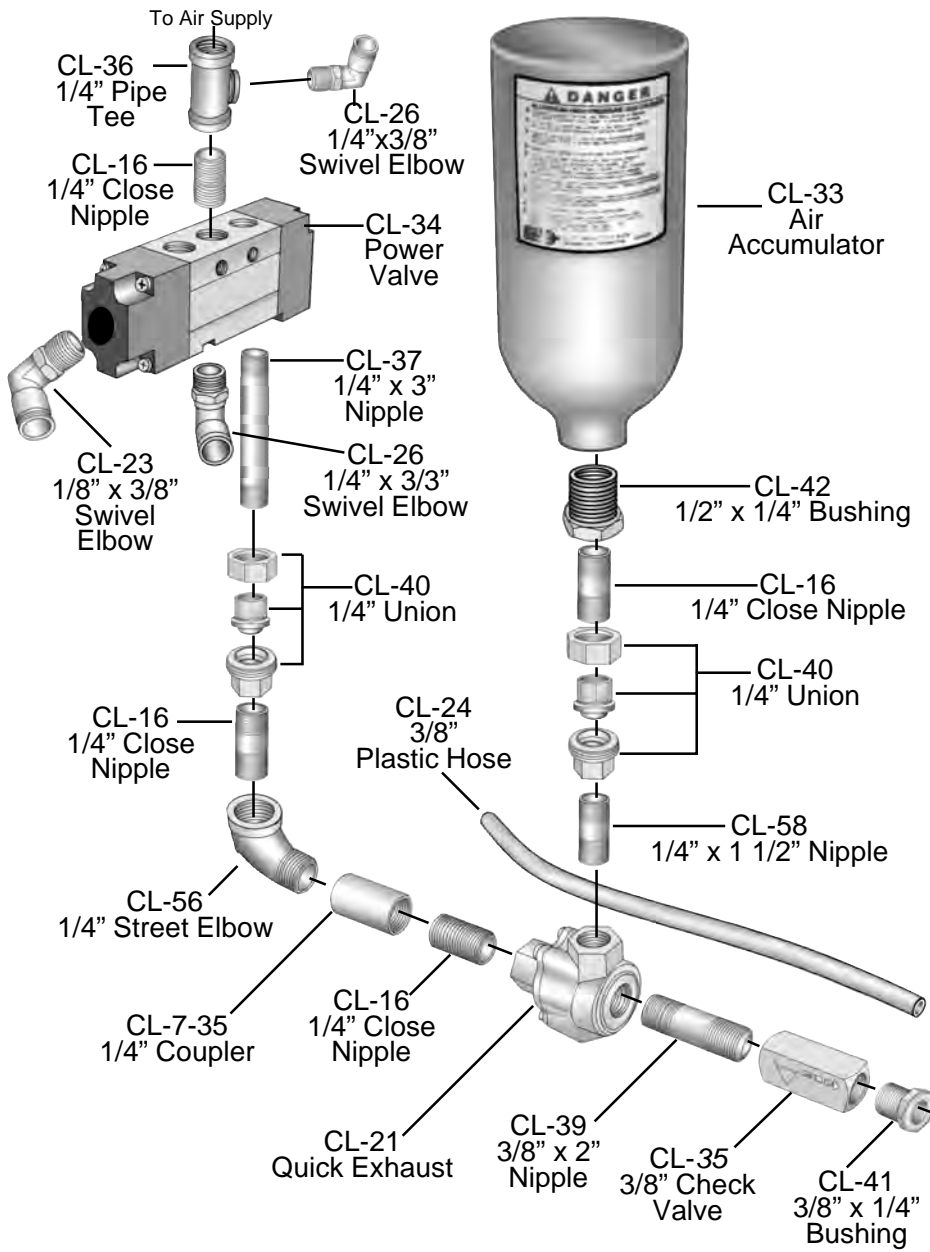


TIPPMANN CLICKER Air Accumulator System

SCHMATIC 05/17/2007

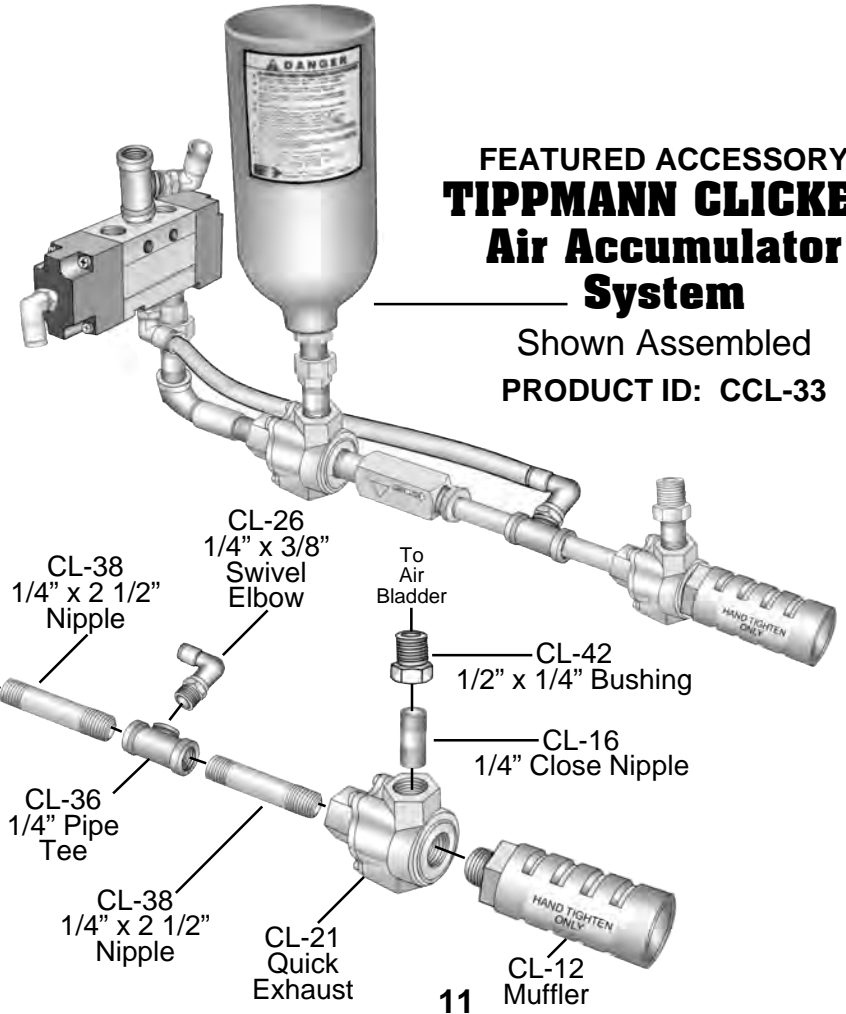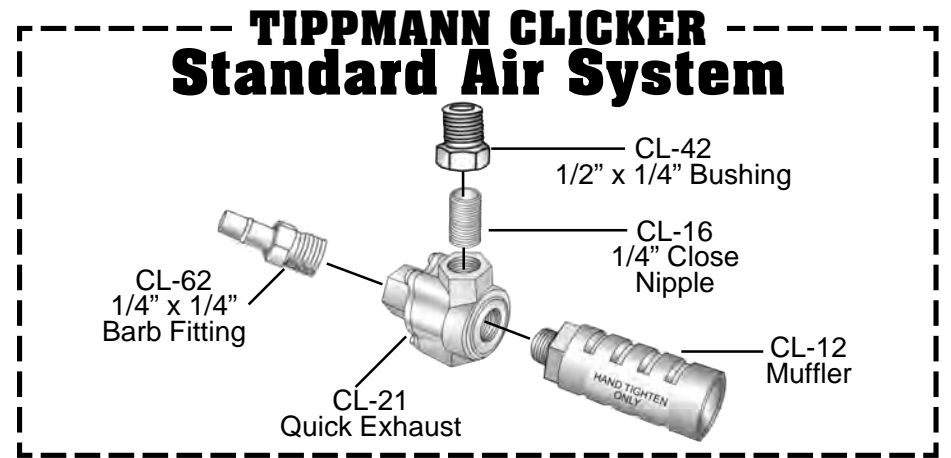

TIPPMANN CLICKER MODEL 1500

SCHEMATIC 05/09/2007

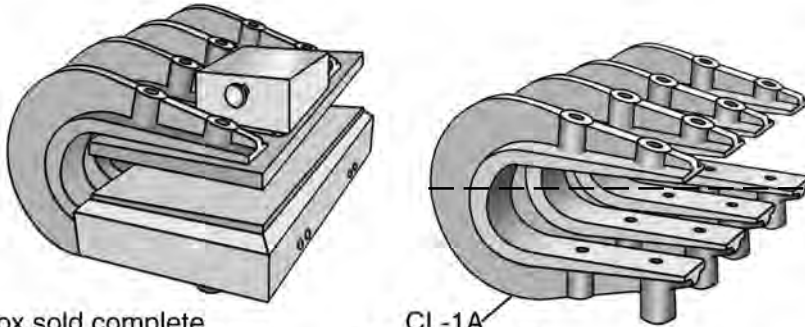

Control Box sold complete as one replacement part - CB-15

CL-3 Control Box (Housing Only)

To Bladder Air Hook Up

CL-1A C-Castings (4)
RG-16 Quick Connect

To Bladder Air Hook Up

CB-07 8-32 x 3/16" Set screw

CB-03 1/4 NPT x 1/4" Barb

CB-05 Bulkhead

CB-07 8-32 x 3/16" Set screw

CL7-54 Button

CB-01 Valve

CB-04 1/8 NPT x 1/4" Barb Elbow

Control Box Insides


CB-06 Hose Clamps (5)

CL-60 1/4" I.D. Tubing (2)

CB-02 1/8 NPT x 1/4" Barb (3)

CB-01 Valve

CL7-54 Button

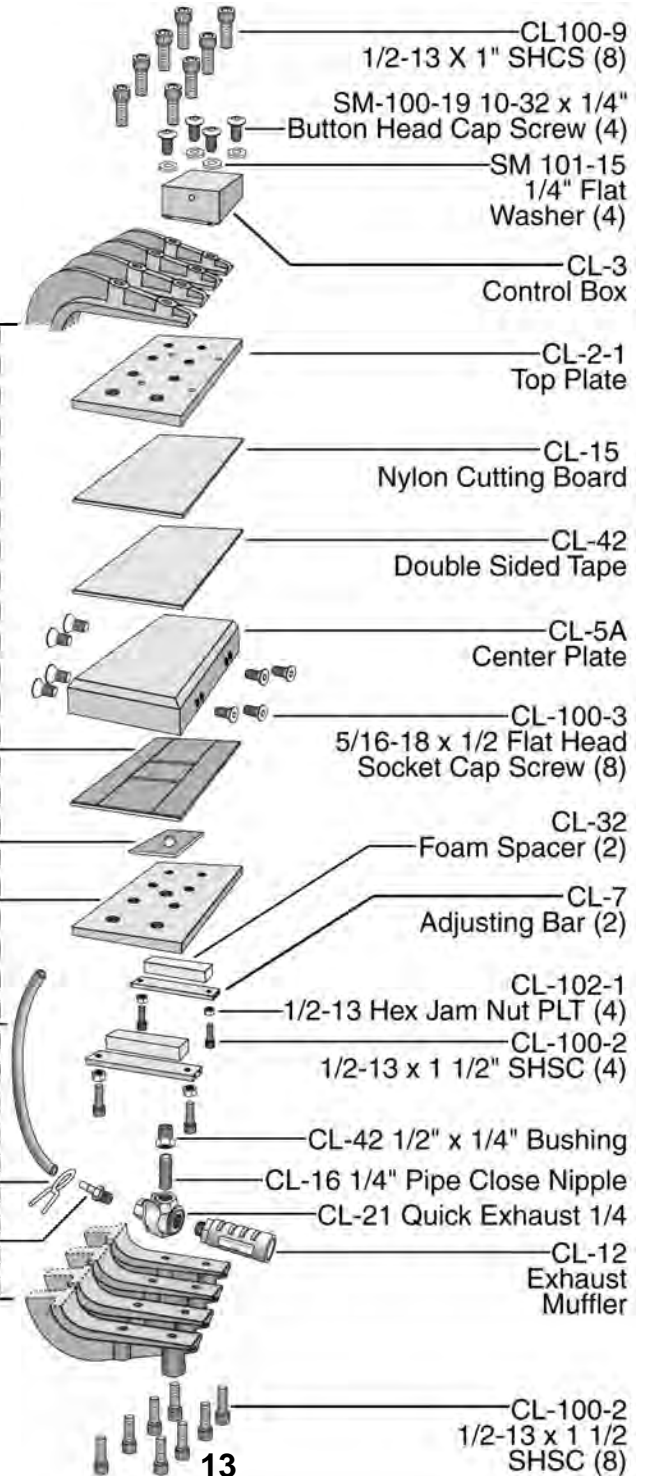

CL100-9 1/2-13 X 1" SHCS (8)

SM-100-19 10-32 x 1/4" Button Head Cap Screw (4)

SM 101-15 1/4" Flat Washer (4)

CL-3 Control Box

CL-2-1 Top Plate

CL-15 Nylon Cutting Board

CL-42 Double Sided Tape

CL-5A Center Plate

CL-100-3 5/16-18 x 1/2 Flat Head Socket Cap Screw (8)

CL-4 Bladder

CLK-33-1 Bladder Tape
CL-2-1A Bottom Plate

CL-32 Foam Spacer (2)

CL-7 Adjusting Bar (2)

CL-60 1/4" I.D. Tubing

CL-102-1 1/2-13 Hex Jam Nut PLT (4)

CL-100-2 1/2-13 x 1 1/2" SHSC (4)

CB-06 Hose Clamp

CL-42 1/2" x 1/4" Bushing
CL-16 1/4" Pipe Close Nipple

CL-62 1/4" x 1/4" Barb Fitting



CL-21 Quick Exhaust 1/4"

CL-12 Exhaust Muffler


CL-100-2 1/2-13 x 1 1/2 SHSC (8)

TIPPMANN CLICKER MODEL 700

SCHEMATIC 05/09/2007

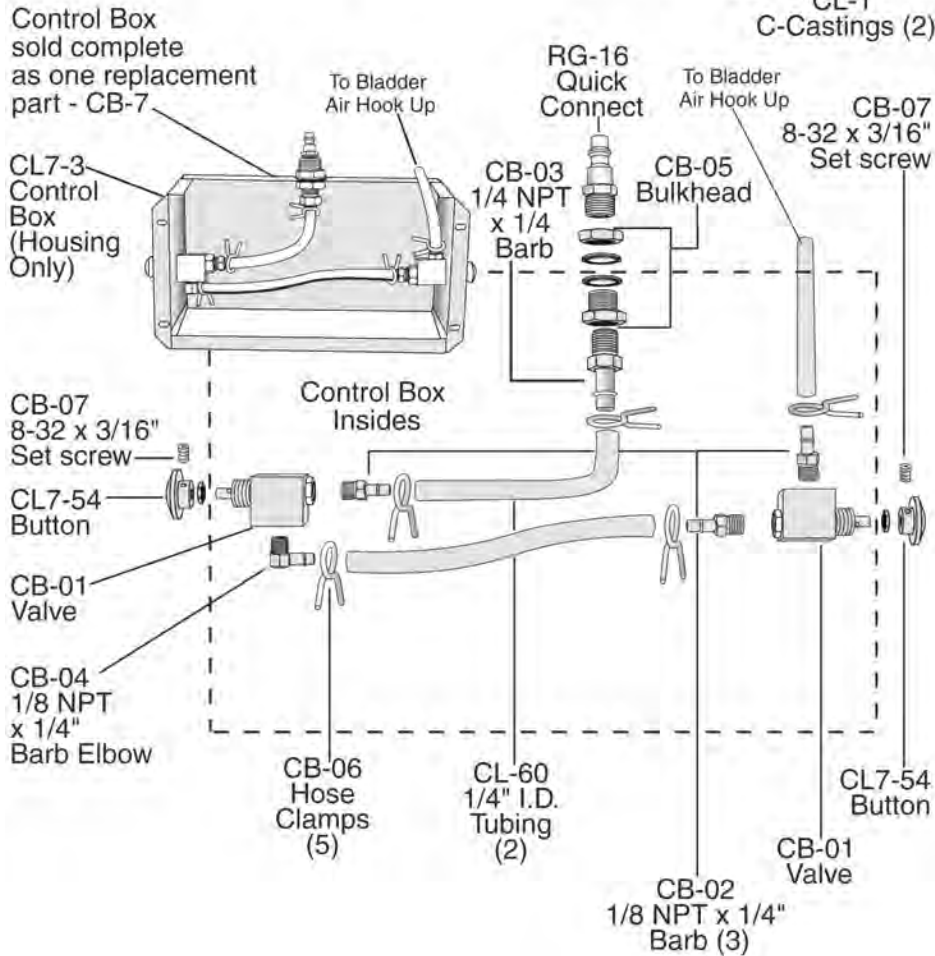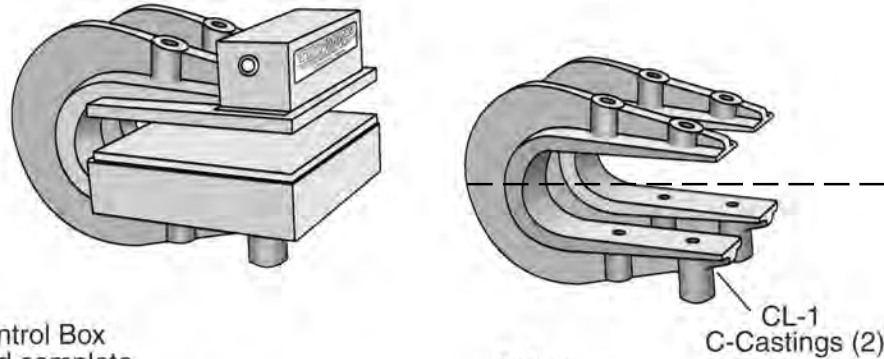

14

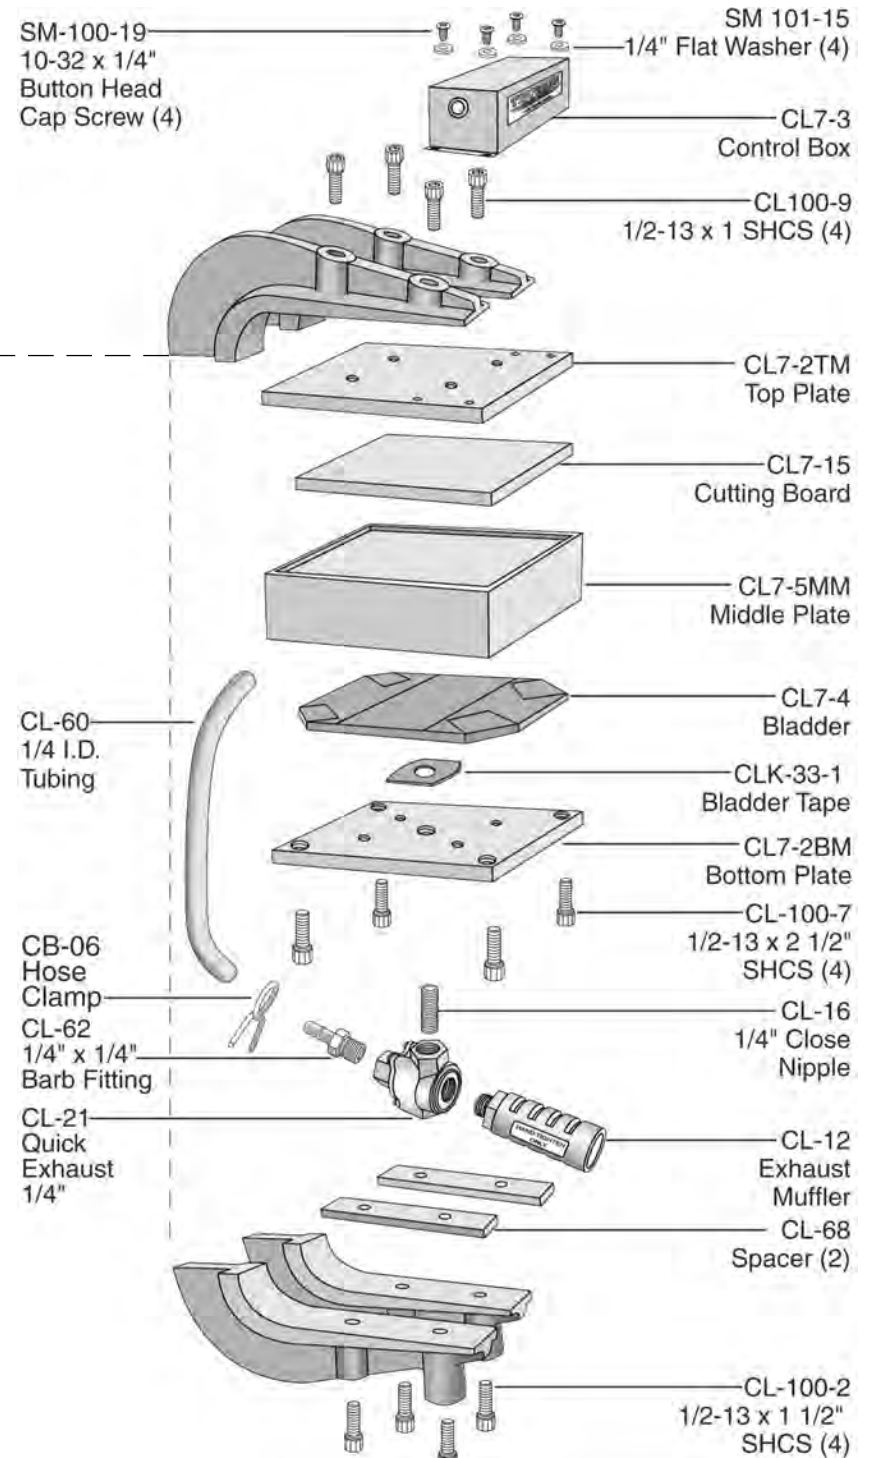

15


TIPPMANN CLICKER ACCESSORIES

CL - 34

SLIDE DECK

The slide deck allows you to slide the entire cutting deck in and out of the machine in order to load the material and die. This will allow you to view the exact location when loading your die.

\$220.00

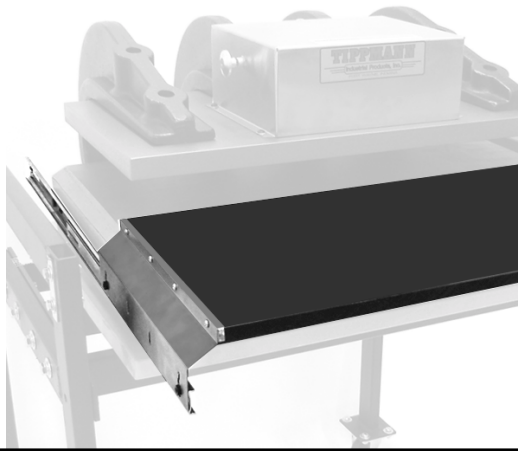


CL - 2H

2 HAND - NO TIE DOWN - DUAL PALM CONTROLS

If your company mandates OSHA compliance, we can handle it. Our dual palm controls will bring your Clicker up to standard. The dual palm controls will not let the machine operate unless both the left and right buttons are held simultaneously.

\$400.00

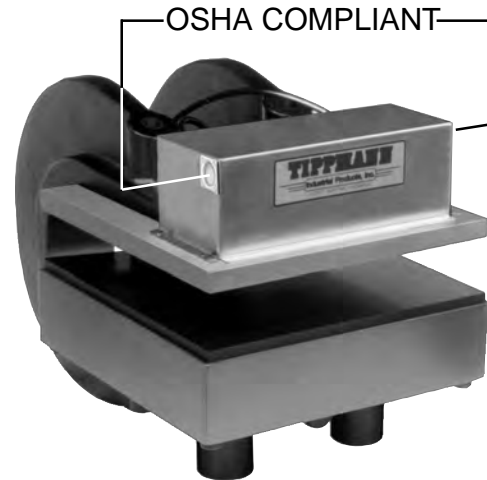

CLK - 69

CASTERS

You can turn your Tippmann Clicker Press into a mobile work station by adding easy glide casters to either your Clicker 700 stand or your Clicker 1500 stand (set of 4).

\$120.00



TIPPMANN CLICKER ACCESSORIES

CUSTOM DIE BLADES

We Offer a Complete Steel Rule Die Service.



- (1) Send us a line diagram or pattern.
- (2) We will call you with a quote.
- (3) Upon your final approval, we will ship your completed die within 5 working days.

CCL 33

15 TON CLICKER AIR ACCUMULATOR SYSTEM



\$400.00

CCLK 50

HEAVY DUTY TABLE for 15 TON CLICKER

\$450.00

Allows you to slide material in and out of Clicker with ease.




CL7-STAND

HEAVY DUTY TABLE for 7 TON CLICKER

\$250.00

Allows you to slide material in and out of Clicker with ease.

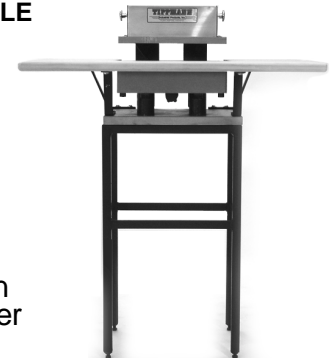

MISCELLANEOUS

DESCRIPTION (Not Pictured)	PART #	PRICE
CLICKER Cutting Bed Tape	CLK 33	\$ 22.00
7 TON CLICKER Cutting Bed (1/2"X12"X12" Replacement)	CL 7 - 15	\$ 30.00
15 TON CLICKER Cutting Bed (1/2"X12"X24" Replacement)	CL 15	\$ 45.00